



Nordskog Performance Products

SENDER WIRING INSTRUCTIONS

This sender is a 1-wire sender. The return line for the sender is the body and it is grounded when mounted. Do not use Teflon tape or thread sealer on the sender otherwise it will cause the gauge to read incorrectly. The sender has brass threads and will seal when tightened. The signal wire will be attached to the stud on the sender using the supplied nut. Be sure that the signal wire running back to the gauge does not run next to the spark plugs, spark plug wires or ignition system.